


ARIZONA TILE

SHIMMER

 $\frac{9}{16}'' \times \frac{9}{16}''$ 

Shimmer Abalone


1" x 4"

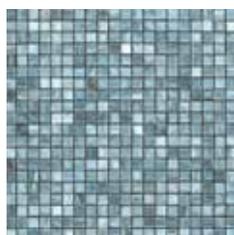

Shimmer Azul



Shimmer Lagoon

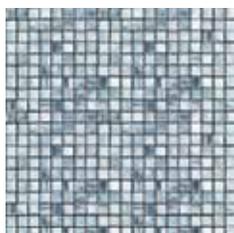

Shimmer Pearl



Shimmer Peridot



Shimmer Teal



PRODUCT TYPE

Glass

FINISH

Glossy

SIZES

 $\frac{9}{16}'' \times \frac{9}{16}''$

1" x 4"

COLORS

Shimmer Abalone

Shimmer Azul

Shimmer Lagoon

Shimmer Pearl

Shimmer Peridot

Shimmer Teal

Shimmer Tigers Eye

Shimmer Topaz

RECOMMENDED USES

Commercial

Residential

Interior Floor

Countertops

Interior Wall

Exterior Cladding

Fireplaces

Showers

*Shower Floors

Steam Showers

Pool & Spa (submerged)

 $\frac{9}{16}'' \times \frac{9}{16}''$ Mosaic only

Please note: Shimmer Glass is paper face-mounted. Sheets should be installed with the paper facing out.

Shimmer glass mosaics are hand-poured, resulting in the beautiful variation seen in each color. This variation in tone and shade makes each piece unique. The hand-pouring also leads to a more creative, free-formed mosaic which can include slight creases and bubbles, seen on the surface, as well as grout joint sizes that may vary.

The materials used to create Shimmer glass, including recycled glass, are fired in the kiln for 24 hours at 800-900° Celsius. Once in a liquid state, it is hand-poured into the mold and allowed to cool.

The post-consumer recycled glass content for each color is:

Shimmer Abalone: 15%

Shimmer Peridot: 15%

Shimmer Azul: 15%

Shimmer Teal: 15%

Shimmer Lagoon: 35%



Shimmer Tigers Eye: 15%

Shimmer Pearl: 10%

Shimmer Topaz: 0%



Shimmer Tigers Eye

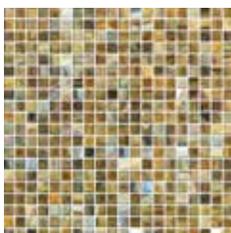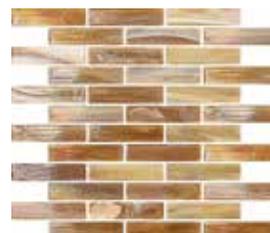

Shimmer Topaz



SIZE	CONVERSION/PC.	PIECES/BOX	SF/BOX	BOXES/PALLET	SF/PALLET
$\frac{9}{16}'' \times \frac{9}{16}''$	1.151	10	11.51	72	828.72
1" x 4"	1.151	10	11.51	60	690.60

Please view actual material when making your selection, as the images on this page are only representative.

www.arizonatile.com

ARIZONA TILE

SHIMMER



STEP 1

Using the flat side of a trowel, firmly apply latex modified white thinset (that meets standards for glass tile installations) onto the substrate.



STEP 2

With additional setting material, using a notch trowel, comb full notches horizontally to establish the proper depth of the setting bed.



STEP 3

Flatten the peaks of the thinset by using the smooth side of the trowel prior to installing the glass. This will help to minimize the occurrence of visible effects behind the glass.



STEP 4

Shimmer Glass is paper face-mounted. Sheets should be installed with the paper facing out. Apply the tile into the setting bed, using light, even pressure to establish contact and eliminate any voids. Align each sheet carefully as it is installed to create uniform grout joints from sheet to sheet.



STEP 5

Using a float, gently push the tile into the setting bed, to create a uniform and flat surface. Wait 15-20 minutes for the thinset to bond.



STEP 6

Begin wiping down the paper with a damp sponge and warm water. Rub lightly to avoid disturbing the tile placement. The paper facing will begin to darken as the water is absorbed.



STEP 7

After 2-3 hours, test a corner of the paper sheet. Pull lightly downward at an angle instead of straight out. If the sheet does not pull away cleanly, sponge again until the paper releases easily. Remove the paper facing as you install the sheets one group at a time. Once the paper has been removed, examine and straighten any joints that are not aligned. This **MUST** be done while the thinset is still pliable. Do not wait until all of the sheets are installed to begin straightening joints. Repeat these steps until all sheets have been installed.



STEP 8

After 24-48 hours, the thinset will be cured, and the tile will be ready for grouting. Use a nylon bristle brush, a sponge, and warm water to clean any glue or paper residue from the tile surface. If necessary, use a utility knife to carefully remove any excess thinset from the joints. With a hard rubber float spread your prepared grout at a 45 degree angle (on a diagonal) across the tile field. After grouting the area, wait 20 minutes before you start to clean the excess. Use a damp sponge and soft brush to minimize how much grout goes into the creases, however it is very difficult to prevent. It is normal for some grout to go into the creases.

